

Wilson Combat Trigger Adjustment

We recommend that this product be installed by a competent gunsmith familiar with the proper function of a 1911 model pistol.

To remove free play from your trigger after installation, make sure the bow is well supported and use a small pair of needle nose pliers to carefully pry out the tabs on both sides by the same amount. A little goes a long way so don't bend them out too far initially. Re-install the trigger and check your adjustment and bend out the tabs more if necessary.

